


SHINY KUNAI QUICK GUIDE

Thank you for purchasing a Shiny Kunai! Here are a few things you should know:

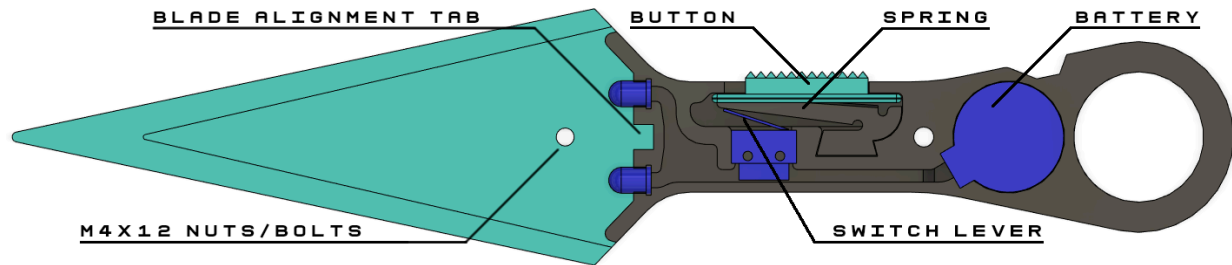

Operation:

- Press the trigger button to momentarily activate the LEDs. This can be operated with a finger or by squeezing with your entire hand.
- Press and slide the button forward to lock it in the ON position.
- Note: Throwing the Kunai may break the blade tip or alignment tab.

Maintenance:

- Required tool: 2.5mm hex wrench.
- Battery type: (1) CR2032 coin cell. Non-rechargeable. 24hr+ est. run time.
- Battery swap: Unscrew the (2) M4x12mm bolts. Remove the blade, then split the handle halves. Replace the battery.
- **IMPORTANT:** After inserting a new battery, ensure a solid connection by pressing down on the battery and bending the battery retention tab down enough to hold the battery tightly.

Troubleshooting:

- If one or both LEDs dim intermittently, the battery may have loosened. Perform the battery tab bending maintenance described above.
- If the trigger becomes hard to slide, open the handle and clear the trigger area of any debris. Polish the spring and trigger sliding surfaces with a fine grit sandpaper or file. Consider adding silicone grease.
- If the LED stays on, carefully bend the switch lever to adjust the sensitivity.
- Feel free to contact me with any other issues!

I'm always working on new sci-fi gear! If you like this kind of stuff, follow @starside_armory on Instagram for updates. Thanks again for your support, I couldn't do this without you!

See you starside,